


Universal Visorguard Assembly Instructions

Assemble washers, shaft and spacer onto mounting rod, as shown.

Tighten 1/4 - 20 locking hex nut until it hits stop.

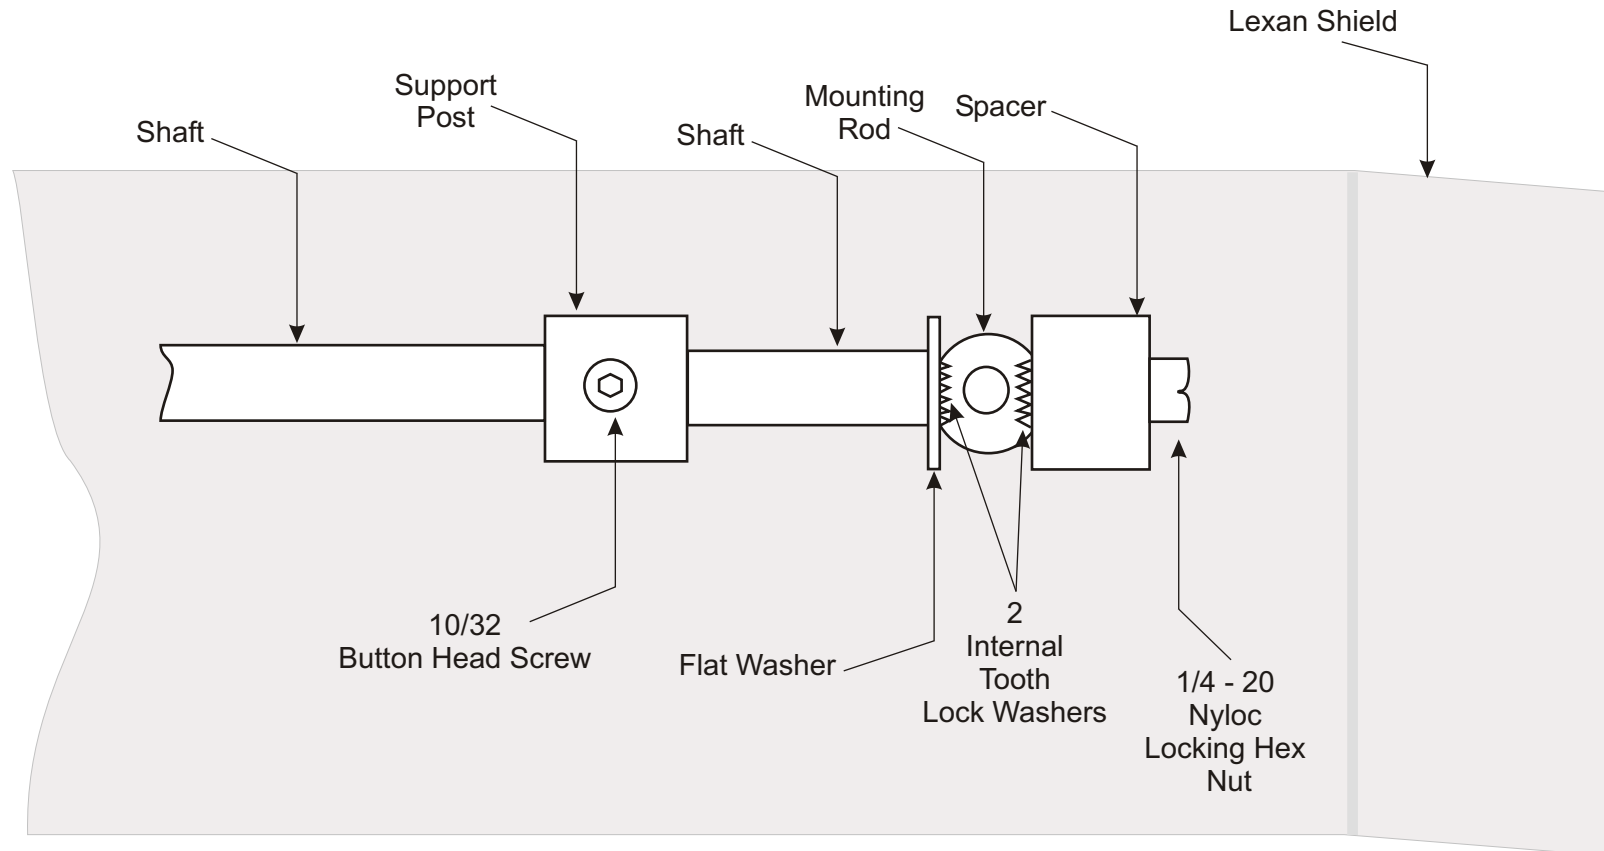

Manufactured by Flexbar Machine Corporation
250 Gibbs Road • Islandia, NY 11749
800-879-7575
www.flexbar.com • sales@flexbar.com